
Tanaka.

Parts Catalog

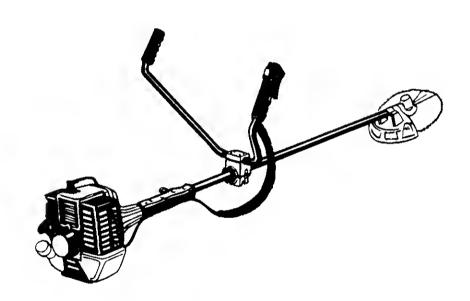

Brush Cutter

Model: TBC-500

TBC-500

OPTIONS AND ACCESSORIES

NYLON LINE



746157 .105, Box, 50 ft.
746161 .105, 1/2 lb. Box, 110 ft
746162 .130, 1/2 lb. Box, 75ft.
746166 .105, 1 lb. Box, 235 ft.
746167 .130, 1 lb. Box, 150 ft.
746170 .105, 3 lb. spool, 705 ft.
746171 .130, 3 lb. spool, 450 ft.
746174 .105, 5 lb. spool, 1175 ft.

746175 .130, 5 lb. spool, 750 ft.

SEMI-AUTO HEAD



746153 PNH-180

Parts List

ET-1201 Body
ET-1206 Cap
ET-1225 Adapter
ET-1205 Spool
ET-1207 Eyelet
ET-1208 Spring
ET-1209 Bump Disk

BLADES

ALUMINUM MANUAL HEAD



PCH-100 (746180)


PCH-300 (746190)

PERFECT MIX® 2-Cycle Engine Oil



700109 2.8 oz. Bottle, 1 Gallon Size (24*) 700108 16 oz. Self-measuring Bottle (24*) 700110 1 Gallon Jug Commercial Size (6*) * Case Quantity

SHOULDER STRAPS





PSS-175

SS-250


BLADE SAFETY DISK

746105 Weed Blade, 10"X4T

746106 Weed Blade, 10"X8T

746108 Saw Blade, 10"X80T

746192 Carbide Blade, 9"X36T

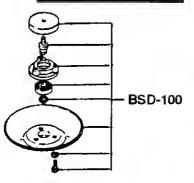

00131 Owner's Manual 10992 Parts Catalog

MANUALS / CATALOGS

BSD-100 Parts List

603-33411-200 Cover, disk 604-33411-204 Bolt, disk fixing 602-33411-201 Metal, disk 999-66100-203 Bearing, ball 993-50015-002 Ring, stop 601-33411-201 Disk, safety 992-10060-012 Washer,s, 6mm 990-21060-151 Bolt, 6x15mm

SPECIAL TOOLS

 006-29326-000
 Flywheel Remover
 020-29371-140
 Coil gap guage

 009-29326-000
 Piston Pin Remover
 001-29000-000
 Tachometer

 015-29371-000
 Gear Shaft Remover
 070-2000W-500
 Pressure Tester

 016-29371-000
 Pinion Remover
 070-2000W-501
 Carb. Tool Kit



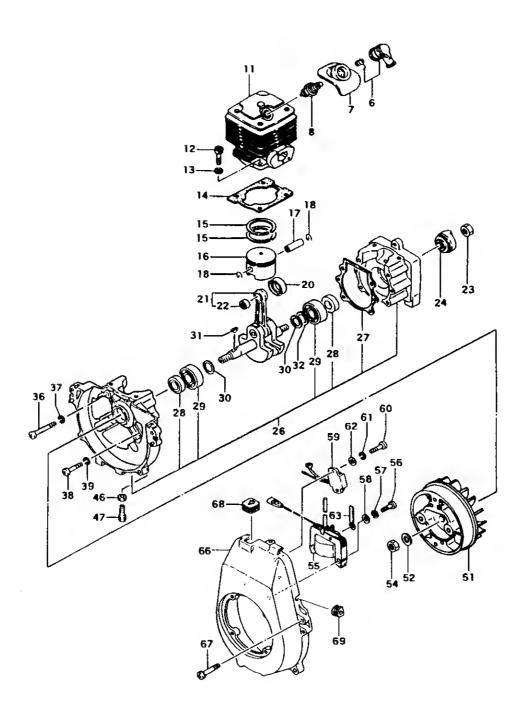








FIG.1 ENGINE




REF.	PART NO.	PART DESCRIPTION	Q	C	S	SERIAL NO	REMARKS
6	157-11666-900	CAP,SPARK PLUG ASS'Y	1		С		
7	255-04200-200	COVER,SPARK PLUG,RUBBER	1		C		
8	018-02233-200	PLUG,SPARK	1		D		
11	002-04220-200	CYLINDER	1		D		
12	990-11050-181	SCREW,5X18	4		В		
13	992-10050-062	WASHER,S,5	4		D		
14	017-04220-21	CACKET OW INDER			_		
15	041-04090-210	GASKET,CYLINDER			C		
		RING,PISTON	2		С	1	
16	031-04090-201	PISTON	1		D		
17	037-04090-200	PIN,PISTON	1	М	D		
18	039-01000-200	CIRCLIP, PISTON PIN	2		D		
20	036-04090-20	COLLAR, PISTON PIN	2		С		
21	046-04220-80	CRANKSHAFT	1		D		
22	999-62101-480	BEARING, NEEDLE	1		D		
23	991-11100-013	NUT,10	1		С		
24	798-05015-200	PULLEY,STARTER	$\ _1\ $		c		
26	072-04220-900	CRANKCASE,ASS'Y	$\ \cdot\ $		D		Includes bearings, seals & gasket
27	090-04200-210	GASKET, CRANKCASE	$ \cdot $		D		mendado bodimigo, oculo a gasket
			Ш				
28	999-66152-511	SEAL,OIL,#VE15X25X7	2		Α		
29	999-61620-200	BEARING,BALL,#6202	2		В		
30	070-02401-201	WASHER, CRANKSHAFT 15X22	2		D		
31	068-02000-200	KEY,WOODRUFF,3X13X5	1		D		
32	071-02007-200	SHIM,15.2X20X.05	1	1	D		
	071-02007-210	SHIM,15.2X20X.10	ارا	П	D		Shims are "as needed" to obtain
					1		correct c/s side clearance.
32	071-02007-220	SHIM,15.2X20X.15	1		Ы		
32	071-11600-230	SHIM,16X21X.20	1		D		
	071-11600-240		1	-			
	990-11060-451	SCREW,6X45	2	- 1	D		
	992-10060-012	WASHER,S,6	3	П	A		
38	990-11060-301	SCREW,6X30	2	Н			
	11000 001	1244,07.30	-		٦		
39	992-10060-012	WASHER,S,6	2		Α		
46	991-01060-013	NUT,6	1		В		
	894-01401-201	RECEIVER,OUTER	1		В		
51	155-20520-80	ROTOR,MAGNETO	1		D		
	992-00100-011	WASHER,10			D		
	991-11100-011	NU1,10	Y	-	C		
55	167-20505-80	COIL,IGNITION					
	990-11050-181	SCREW,5X18	3	- 1	C B		
	000 11000-101	OUT ICTT, UX 10	3		^D		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
57	992-10050-012	WASHER,S,5	3		Α		
58	992-00050-011	WASHER,SMALL,5	3		С		
59	159-20505-800	IGNITOR	1		С		
60	990-11050-141	SCREW,5X14	2		D		
61	992-10050-012	WASHER,S,5	2		Α		
62	992-01050-011	WASHER,5	2		Α		
						ļ	
63	198-05015-800	CLAMP,CORD	1		D	i	
66	112-04230-20	CASE,FAN	1		D		
67	994-14060-202	SCREW,6X20S	4		D		
68	203-0604A-202	GROMMET	1		C.		
69	203-06000-200	GROMMET, PRIMARY CORD	1		C		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.2 ENGINE COMPONENTS

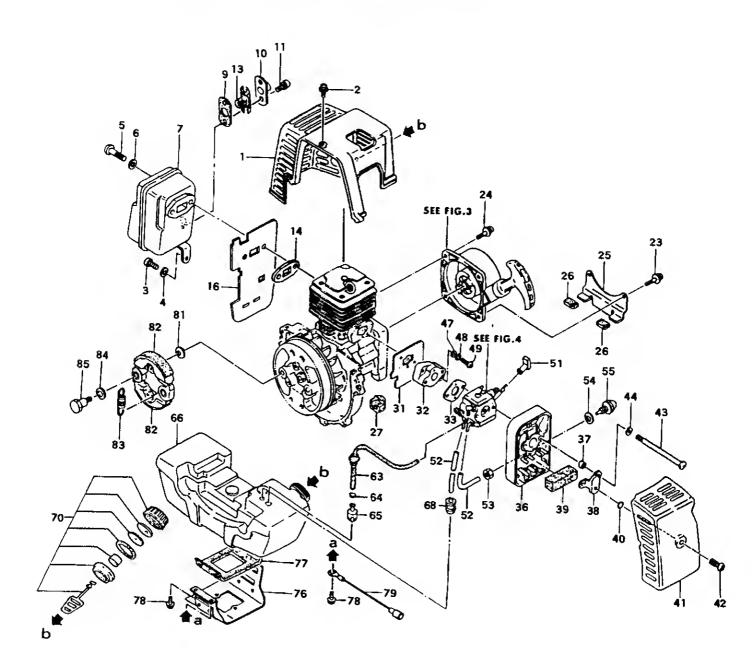

	3UNE 2	1BC-500 P	<i>A</i>	7 /	<u> </u>	LISTING	
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
1	738-04220-20	PROTECTOR, MUFFLER	1		С		
2	994-15050-122	SCREW,5X12/PS	1		C		
3	990-11050-121	SCREW,5X12	1		Α		
4	992-01050-011	WASHER,5	1		Α		
5	990-53060-653	SCREW,HEX,6X65	2		D		
6	992-01060-011	WASHER,6	2		Α		
7	706-04230-80	MUFFLER	1		D		
9	751-04200-201	GASKET, MUFFLER	1		С		
10	721-0097A-801	PIPE,TAIL	1		D		
11	994-14040-081	SCREW,4X8	2		D	1	
13	732-0631A-200	ARRESTER, SPARK	1		С	7	
14	737-04230-200	GASKET, MUFFLER	1		D		
16	133-04230-20	SHIELD,HEAT	1		С	1	
23	994-15050-182	SCREW,5X18/PS	2	М	С		
24	994-15050-252	SCREW,PS,5X25	2	М	С		
25	653-04200-200	BRACKET, TANK	1	П	D		
26	655-06100-200	CUSHION, TANK	2		Α		
27	655-04200-200	CUSHION, FUEL TANK	2		C	1	
	403-04220-21	GASKET,INTAKE	1		C		
	404-04220-81	INSULATOR, CARBURETOR	1		C		
	402-11650-200	GASKET, CARBURETOR	1	Н	Α		
	423-04201-200	BODY,CLEANER	1	М	С		
	659-00801-200	COLLAR, TANK HOLDING METAL	2		C		
38	476-04050-200	BOARD,CHECK,BLOW OVER	1		C		
39	446 04904 000	ELEMENT OF EAVIED					
	446-04201-200 999-67003-000	ELEMENT, CLEANER		М	B C		
1 1	424-04200-210	O-RING,P3		Ш			
		BOLT, CLEANER COVER	1	Ш	C		
	990-11050-601	SCREW,5X60		Ш	В		
	992-10050-012	WASHER,S,5	2	М	C	1	
77.1	992-10030-012	WASHER,5,5	2	- 1	Α		
47	992-00050-011	WASHER, SMALL, 5	2		С		
	992-10050-012	WASHER,S,5	2		A		
	990-11050-241	SCREW,5X24	2			1	
		LEVER,CHOKE	1		Ā		
		PIPE,FUEL	2				
		וווען,10ען	4	1			
		,,,,					10
54	992-20100-010	WASHER,10 INNER TOOTHED	1	-	D		
	422-25030-800	PUMP,PRIMING	1		c		
	<u>/</u>			-			

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 2 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
63	223-01251-901	PIPE,FUEL,3X5X230	1		C		
64	680-00731-201	CLIP	1		В		
65	675-01630-900	FILTER,FUEL	1		Α		
66	591-04220-200	TANK,FUEL	1		D		
68	534-32710-200	GROMMET, FUEL PIPE	1		C		
70	595-0423Q-90	CAP,TANK	1		Α		
76	603-04201-200	BAND,HOLDING,TANK	1		С	1	
77	652-04201-200	CUSHION	1	d.	С		
78	994-15050-162	SCREW,5X16/PS	2		c		
79	179-04201-800	CORD,STOP	1		D		
81	359-10112-203	WASHER,CLUTCH B	2		Α	1	
82	290-04200-80	SHOE,CLUTCH	2		В		
83	342-04200-200	SPRING,CLUTCH	1		В		
		WASHER,CLUTCH	1		Ā		
85		BOLT,CLUTCH STEP	2		В		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.3 RECOIL STARTER


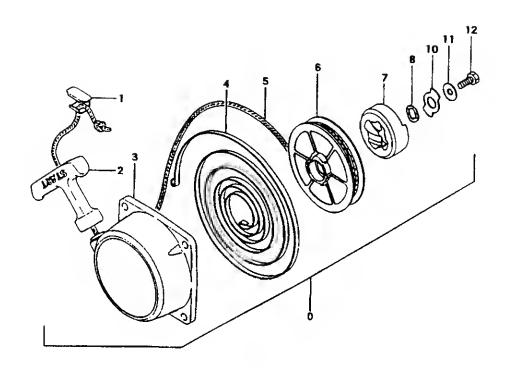


FIGURE 3

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	 REMARKS	W-2-12
0	762-05015-91	STARTER, RECOIL ASSY	1		В			
1	815-06000-200	METAL,STARTER HANDLE	1		D			
2	785-04220-20	HANDLE,STARTER	1		С			
3	772-05015-800	80DY,RECOIL STARTER	1		С			
4	779-06000-200	SPRING,RECOIL	1		В			
5	783-05004-200	ROPE,STARTER,3.8X1070	1		D			
				1				
6	769-05015-200	REEL,STARTER ROPE	1		C	-		
7	788-05015-200	PAWL,STARTER	1	ŀ	F			
8	801-05015-200	WASHER, STARTER PULLEY	1	l	В			
10	837-05015-200	PLATE, FRICTION	1		F			
11	822-05015-200	SHIM,STARTER PULLEY	1		F			
12	839-05015-20	BOLT,SET	1		c			

FIG.4 CARBURETOR

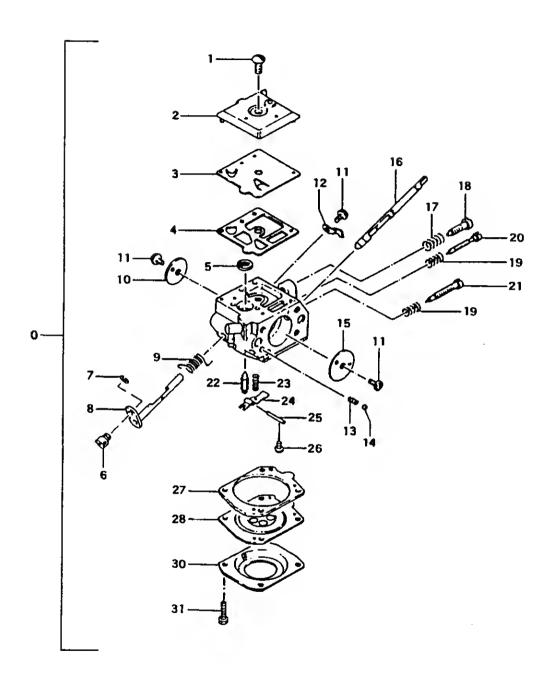

	30NE 4	1BC-500	PAI	7/3	7	LISTING	
REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO.	REMARKS
0	455-25055-900	CARBURETOR, ASS'Y	1		D		
1	514-25001-200	SCREW,SET	1				
2	575-25012-200	BODY,PUMP	1		D		
3	~~~	(1)(2)GASKET,PUMP	1		c		·
4	~~~	(1)(2)DIAPHRAGM,PUMP	11	П	С		(1) Carb. Repair Kit
5	~~~	(1)SCREEN,INLET	1		С		650-25032-910
6	539-25101-200	SWIVEL	1		D		(2) Carb. Gasket/Dia. Kit
7		RING,STOP	1	Ш	C		652-25032-910
		SHAFT,THROTTLE	11	Ш	D		
9	486-25032-200	SPRING,THROTTLE	1		c		
10	488-25001-200	VALVE,THROTTLE	1	Н	С		
11	467-25003-200	SCREW,SHUTTER	3		С		
12	559-25012-200	PLATE,STOP	1		Ы		
13	496-25032-200	SPRING,CHOKE	11		c	1 11	
14	567-25032-200	BALL,STEEL	1	1	cl		
15	493-25032-200	VALVE,CHOKE	1.	Ш	c		
16	492-25032-200	SHAFT,CHOKE	1	Ш	c		
17	463-25012-200	SPRING,IDLE ADJUST	1	1	D		
18	462-25006-200	SCREW,IDLE ADJUST	1	ı	Ы		
19	623-25054-200	SPRING,ADJUST	2	H	D		
20	461-25032-200	SCREW,LOW ADJUST	[1]	H	D		
21	460-25032-200	SCREW,HIGH ADJUST	1		D		
22	~~~	(1)VALVE,NEEDLE	1	- 1	c	1	
23	477-25051-200	SPRING,VALVE	1	ľ	D		
24	~~~	(1)LEVER,CONTROL	1	1	Ы		
25	~~~	(1)PIN,FLOAT	1	[D		·
	546-25001-200	SCREW,SET,HINGE PIN	1	1	D		
27	~~~	(1)(2)GASKET,DIAPHRAGM	1				
28	~~~	(1)(2)DIAPHRAGM,METERING	11	(
		COVER,DIAPHRAGM	1	1)		
31	548-25016-200	SCREW,SET	4	ΙE			

^{(1) (2)} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.5 CLUTCH CASE


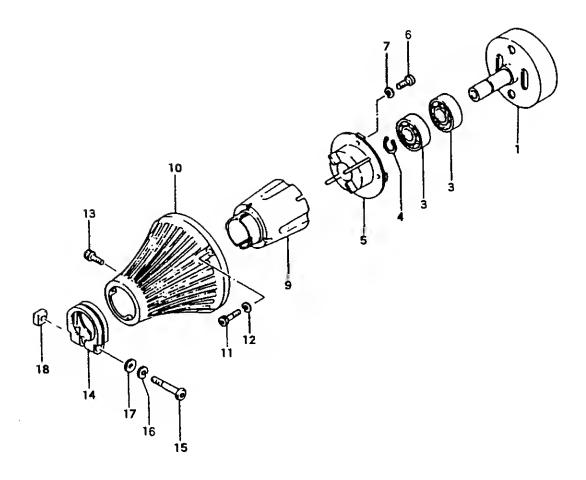



FIGURE 5

TBC-500 PARTS LISTING

	IONE 5	1BC-300 F	M	7,	3	LISTING	
REF.	PART NO.	PART DESCRIPTION	a	С	S	SERIAL NO.	REMARKS
1	289-04205-801	SHAFT,CLUTCH	1		С		
3	999-61620-202	BEARING,BALL,#6202Z	2		С		
4	993-50015-002	RING,STOP,C-15 EX	1		C		
5	347-04201-20	FLANGE,CLUTCH	1		С		
6	990-11050-161	SCREW,5X16	4		В		
7	992-10050-012	WASHER,S,5	4		Α		
1							
9	599-04201-80	CUSHION	1		C		
10	331-04201-200	CASE,CLUTCH	1		D		
11	990-51050-123	BOLT,HEX,5X12	4		C		
12	992-10050-062	WASHER,S,5	4		D		
13	990-51050-103	BOLT,HEX.HOLE,5X10	1		С		
14	282-04201-200	HOLDER,PIPE	1		D		
15	990-53060-453	BOLT,HEX,6X45	1		C		
16	992-10060-062	WASHER,S,6	1		Α		
17	992-01060-061	WASHER,6	1		D		
18	991-91060-061	NUT,SQUARE,6	1		C		

FIG.6 HANDLE(A)

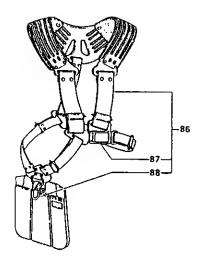

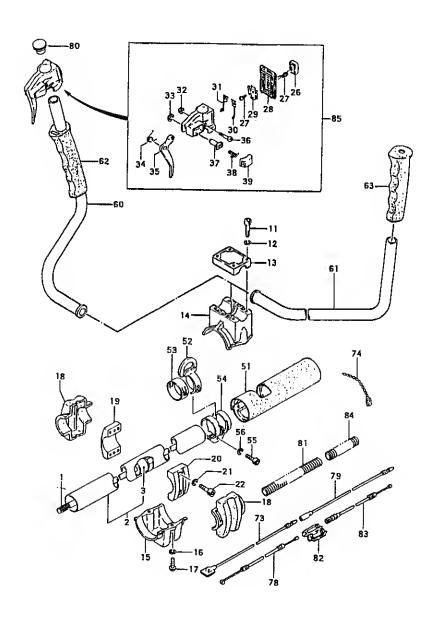


DEE	DARTNO				CICEDIAL NO.	
REF.	- 	PART DESCRIPTION	Q		S SERIAL NO.	REMARKS
1	343-37121-20	SHAFT,DRIVE			D	
	341-37101-80	PIPE, DRIVE SHAFT	1	- 1		
	347-37100-90	BUSHING ASS'Y	5	- 1	D	
	990-51050-163	BOLT,HEX,5X16	4	- 1	cl	
•	992-10050-062	WASHER,S,5	4		D	
13	506-37110-203	BRACKET,HANDLE,A	1		D	
	F07 674 15 555	DD 401/ET				
		BRACKET,HANDLE B			D	
				- 1	D	
			2		<u> </u>	
	990-53060-203	BOLT,HEX,6X20	2		C	
		CUSHION	2		D	
19	449-37100-202	LOCK,SHAFT B	[1]		D	
00	440 07400 0==	1 001/ 01/4== :				
	448-37100-202	A	1	- 1	D	
		WASHER,S,5	2	- 11	D	
		BOLT,HEX,5X18	2	- 11	D	
		SWITCH,STOP		- 1		
		SCREW, TAPPING, 3X8	3	- 11	D	
28	259-37101-200	BASE,STOP SWITCH	1		c	
00	060 07404 000	ODDING OTOD CHITTEE				
		SPRING,STOP SWITCH			D	
		TERMINAL, EARTH 8			C	
		TERMINAL, EARTH A	11	- 1	D	
		NUT,LOCK,5			D	
	993-55060-001	RING,STOP,6	11			
34	832-37101-200	SPRING,RETURN	1	4	c	- /1
35	880-37101-200	ARM THROTTIE			в	
1 1	994-31050-251					
		SHAFT,LOCK BUTTON		ш.	_	
		SPRING,LOCK,BUTTON				
		BUTTON,LOCK		- 1		1
		PAD PAD				
, ,	303 07 100-000	, , , ,	14			
52	335-37100-201	BRACKET,STRAP	1			
		COLLAR, LIFTING METAL				
		STOPPER,STRAP SUPPORT		ш		
		BOLT,HEX.HOLE,5X15				
		WASHER,S,5		- 11		
	A TOTAL STREET, A STREET,	WASHER,S,S HANDLE,RIGHT	1,1	- 10		· (60) (2) (1)
30	30. 00017-200	I MULL, NUNI		1		1-2
61	502-33674-21	HANDLE,LEFT		1		
		GRIP,HANDLE R				i
		and the grant of the second of		1		
					1	

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

				• •	_	2/0////	
REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO.	REMARKS
63	165-33130-200	GRIP,HANDLE A	1		С		
73	178-37100-800	CORD,STOP	2		В		
74	460-33111-900	CLAMP	1		В		
78	885-37110-800	WIRE,THROTTLE	1		В		
79	178-04201-800	CORD,STOP	1		D		
80	499-37100-200	GROMMET,PIPE	1		С		
			1				
81	164-13038-01	TUBE,PROTECTION	1		C		
82	888-04030-200	CASE,CONNECTOR	1	H.	Α		
83	885-04207-800	WIRE,THROTTLE	1		C		
84	164-13018-00	TUBE,PROTECTION	1		D		
85	870-37101-900	LEVER,THROTTLE ASS'Y	1		В		
86	SS-400	STRAP,SHOULDER	1		В		
87	738-37113-900	BUCKLE,SS-400,ASS'Y	11		D D		
88		HOOK,SS-400	1		D		

^{*} Indicates the part is included in a kit or assembly and is not availiable individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.6 HANDLE (B)

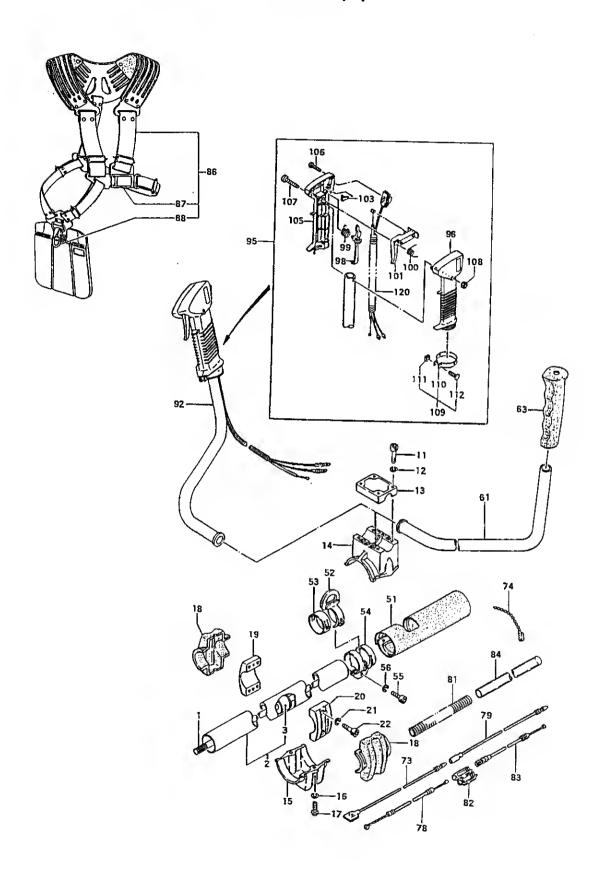


REF.	PART NO.	PART DESCRIPTION	100		ঠা	SERIAL NO.	REMARKS
	343-37121-20	SHAFT,DRIVE	1		D		
2	341-37101-80	PIPE,DRIVE SHAFT	1		С		
		BUSHING ASSY	1		D		A
	990-51050-163	BOLT,HEX,5X16	4		С		
	992-10050-062		4	ı	D		
		BRACKET,HANDLE,A	1		D		
14	507-37110-200	BRACKET,HANDLE B	1		D		
	508-37100-200		1		D		
16	992-10060-062	WASHER,S,6	2		A		
	990-53060-203	BOLT,HEX,6X20	2		c		
	319-37100-200		2		D		
	449-37100-202		1		Ы		
20	448-37100-202	LOCK,SHAFT A	1		D		
21	992-10050-062	WASHER,S,5	2		D		
	990-51050-183		2		D		
	336-37100-800		1		c		
		BRACKET,STRAP	1		D		
		COLLAR, LIFTING METAL	1		D		
54	338-37101-800	STOPPER,STRAP SUPPORT	1	1	D		
55	990-51050-153	BOLT,HEX.HOLE,5X15	1		c		
56	992-10050-062	WASHER,S,5	1	Ш	D		
61	502-33674-21	HANDLE,LEFT	1		c		
63	165-33130-200	GRIP,HANDLE A	1		c		
73	178-37100-800	CORD,STOP	1		В		Used on handle "A" only
74	460-33111-900	CLAMP	1		В		
		WIRE,THROTTLE	1		В		Used on handle "A" only
79	178-04201-800	CORD,STOP	1		D		Used on handle "A" only
81	164-13038-01	TUBE,PROTECTION	1		С		Used on handle "A" only
82	888-04030-200	CASE,CONNECTOR	1		Α		Used on handle "A" only
83	885-04207-800	WIRE,THROTTLE	1		С		Used on handle "A" only
84		TUBE,PROTECTION	1		D		Used on handle "A" only
86	SS-400	STRAP,SHOULDER	1		В		
87	738-37113-900	BUCKLE,SS-400,ASSY	1		D		
88	748-37113-800	HOOK,SS-400	1		D		
	501-37155-20	HANDLE,RIGHT	1	11	D		
95	870-37466-90	LEVER,THROTTLE ASS'Y	1		D		
96	875-37466-20	BODY,THROTTLE			Ь		
1	253-37466-20	LEVER,SAFETY	1				

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

REF.	PART NO.	PART DESCRIPTION	Q	C	S	SERIAL NO	REMARKS
99	958-37411-20	SPRING,LOCK BUTTON	1		С		
100	832-37411-20	SPRING,RETURN	1		С		
101	880-37466-20	ARM,THROTTLE	1		D		
102	956-37411-20	BUTTON,LOCK	1		D,		
105	884-37466-20	BODY,THROTTLE B	1		D		
106	993-42040-182	SCREW,TAPPING 4X18	1		С	0	
107	990-11050-354	SCREW,5X35	1		D		
108	991-01050-043	NUT,5	1		С		
109	889-37411-90	BAND ASSY,THROTTLE LEVER	11	- 1	D	I	
110	889-37411-20	BAND,THROTTLE LEVER	1		D		
111	991-91060-061	NUT,SQUARE,6	1		С		
112	994-31060-203	SCREW,6X20	1		D		
120	887-37466-80	WIRE,THROTTLE	1		С		Includes stop cords and prot. tube

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.7 GEAR CASE

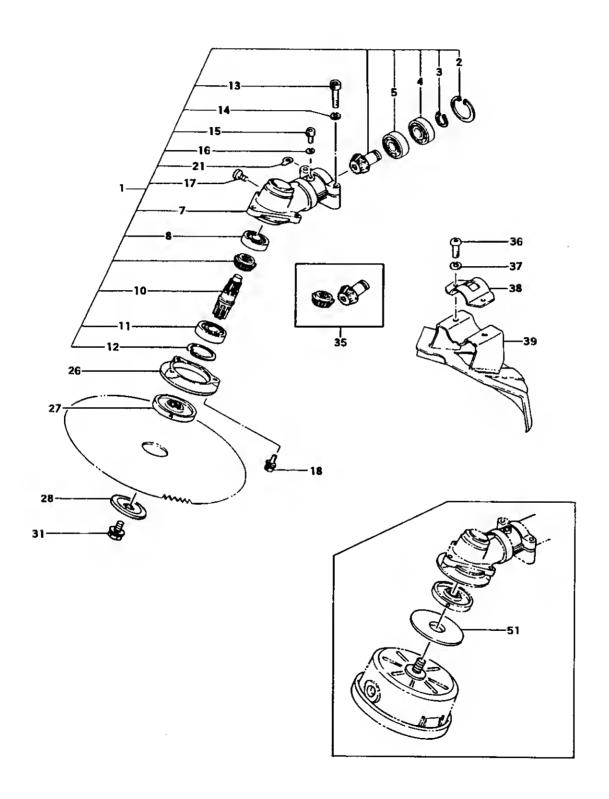


	GUNE /	1BC-500	PAI	41	S	LISTING	
REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO.	REMARKS
1	300-37100-91	CASE,GEAR,ASS'Y	1		С	~P005785	
1	300-37100-93	CASE,GEAR ASS'Y	1		D	P005786~	
2	993-51028-002	RING,STOP,IN,C-28	1		C		
3	993-50012-002	RING,STOP,C-12 EX	1	l.	Α		
4	999-61600-102	BEARING,BALL,#6001Z	1		В		
5	999-61600-100	BEARING,BALL,#6001	1		В		
7	300-37100-21	CASE,GEAR	1		С	~P005785	
7	300-37100-22	CASE,GEAR	1	Ш	D	P005786~	
8	999-61600-000	BEARING,BALL,#6000	1		C		
10	304-37100-20	SHAFT,GEAR	1		D	~P052020	
10	304-37100-21	SHAFT,GEAR	1		С	P052021~	
11	999-61620-303	BEARING,BALL,#6203D	1		С		
12		RING,STOP,C40	1		С	ľ	
13		BOLT,HEX,5X25	2	Ш	В		
	992-10050-062	WASHER,S,5	1	П	D		
	990-51050-123	BOLT,HEX,5X12	1	Ш	C		
	992-10050-062	WASHER,S,5	1	Ш	D		
17	990-14080-104	SCREW,8X10	1		Α		
	994-16050-162	SCREW,5X16/WS	3		D		
		WASHER,GEAR CASE	2		D		
26	307-37100-800	COVER, PROTECTION	1	П	С	~P005785	
26	307-37100-81	COVER, PROTECTION	1		С	P005786~	
	310-37100-20	HOLDER, CUTTER	1		В	~P005785	
27	310-37100-21	HOLDER, CUTTER	1		С	P005786~	
	311-33386-20	CAP, CUTTER HOLDER	1		С		
	312-33386-20	BOLT, FIXING, L.H.	1		C		
	301-37100-00	SET,GEAR/PINION	1	ı	D		
	990-53060-153	BOLT,HEX,6X15	2		В		
	992-10060-062	WASHER,S,6	2		Α		
38	442-37100-200	BRACKET,SAFETY GUARD	1		C		
	441-37100-80	GUARD,SAFETY	1		С		
51	320-33670-200	SPACER	1		D		
		<u> </u>			- 1		

^{*} Indicates the part is included in a kit or assembly and is not availiable individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.8 TOOLS & NYLON HEAD

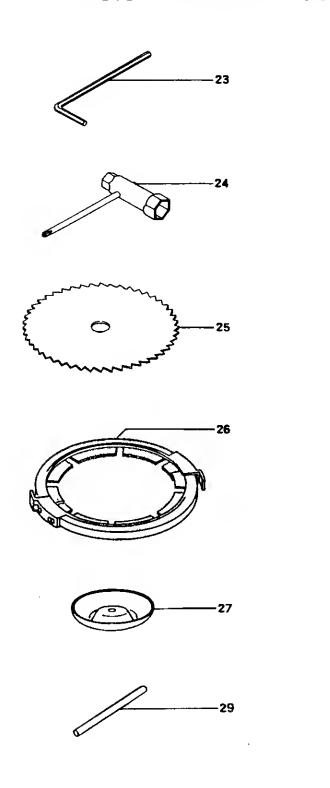

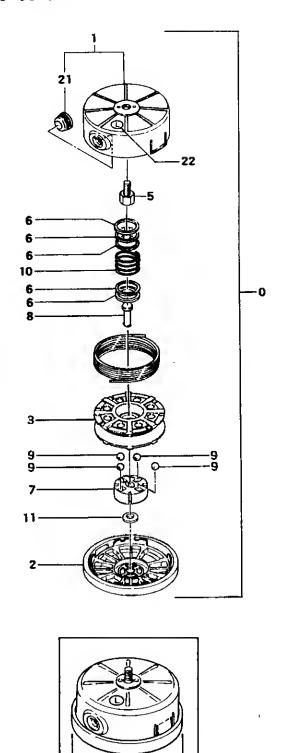

-- 163mm -(6 in.) TH-95L

TBO-300 TAITS LISTING										
REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO.	REMARKS			
0	783-33670-93	IR487/AUTO HEAD (L)	1		В					
1	786-33670-92	BODY,CUTTING	1		C					
2	789-33670-23	CAP,BODY	1		В					
3	787-33670-210	REEL,(L)	1		C					
5	314-33670-20	BOLT,8X1.25 LH GOLD	1		A					
6	792-33004-200	WASHER,REEL	5		Α					
7	790-33004-200	SLIDER,REEL	1		Α					
8	791-33004-200	HOOK,REEL SLIDER	1	Ш	Α	(2)				
9	673-35600-20	8ALL,STEEL	4		В					
10	793-33910-20	SPRING,REEL	1		Α					
11	358-02103-200	WASHER,CLUTCH A	1		Α					
21	788-33670-21	EYELET	2		С					
23	813-20000-200	WRENCH,HEX,4	1		D					
24	826-20000-200	SPANNER,BOX,17X19	1		D					
25	746108	BLADE,10X80,1R489,(PS8-180)	1		Α					
26	BP-100	PROTECTOR,8LADE,9/10"	2		E					
27	308-33410-200	COVER,PROTECTION,8	1		D					
29	752-37100-200	8AR,LOCKING	1		D					
35	948-39907-200	8AG,TOOL	1		D					
		<u> </u>								

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.9 MARKS








FIGURE 9

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	906-04220-20	DECAL	1		D		
4	923-37400-200	DECAL,LEVEL	1		D		
5	919-37719-20	DECAL	1		D		